

HOW TO READ THE SIZE OF A TIRE

[P] [205] / [65] [R] [60]


Tire Class
P: Passenger
LT: Light Truck
None: Metric Size
(European cars)

Section Width
Measured in millimeters from sidewall to sidewall

Aspect Ratio / Profile
Height of the sidewall measured from rim to tread

Tire Construction
R: Radial
Other types: bias, belted bias etc

Wheel Diameter
Measured in inches

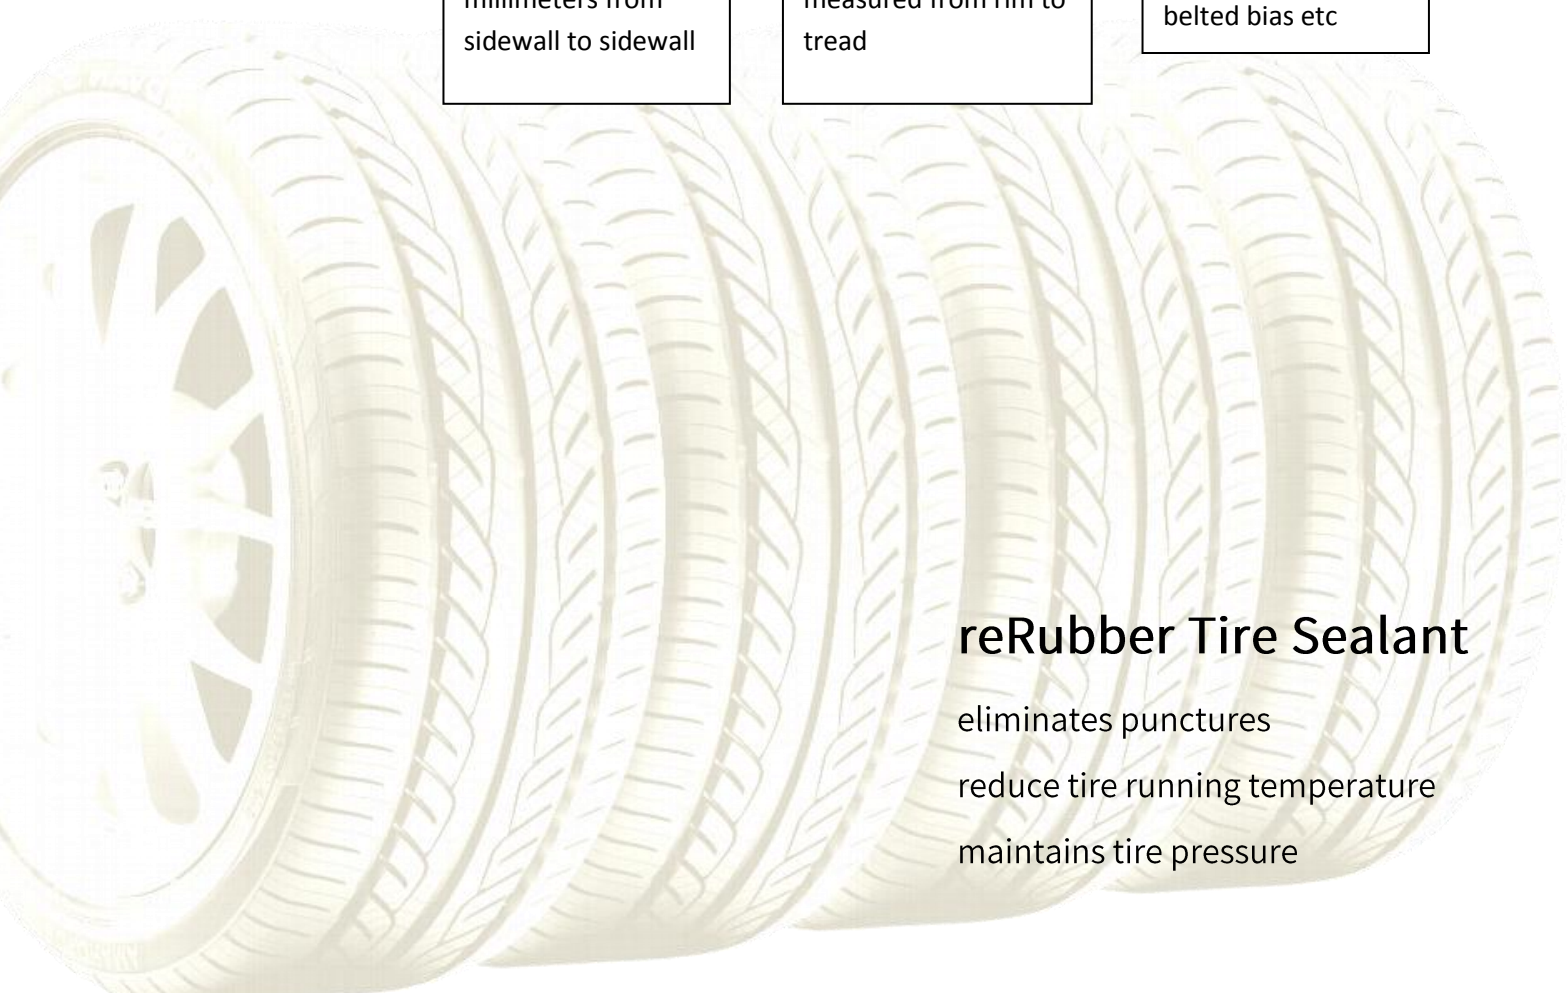

reRubber Tire Sealant

- eliminates punctures
- reduce tire running temperature
- maintains tire pressure